



# ORIGIN SERIES DESIGN GUIDE

## .125" ARCHITECTURAL INSTALLATION



FIELD TRIM AS REQUIRED.

ANGLE TRIM, BY ZEEFF  
PANEL SYSTEMS.

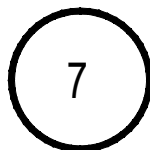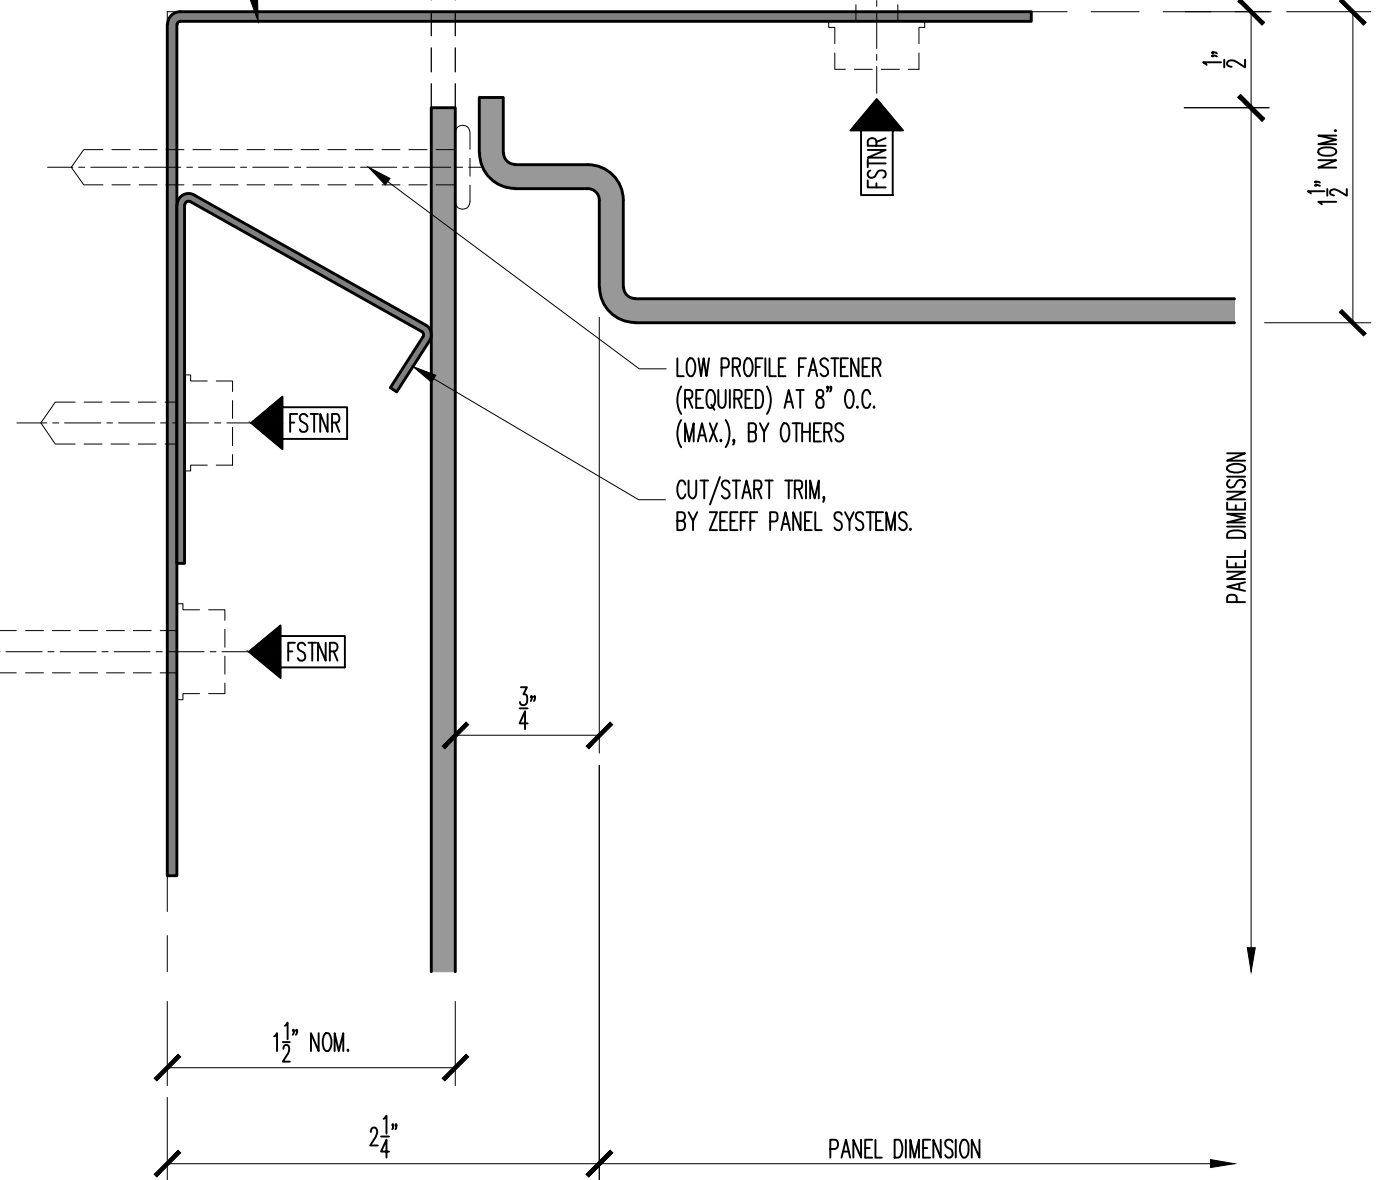

### WALL TO SOFFIT TRANSITION

SCALE: FULL

INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTM E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

# D08