


ORIGIN SERIES DESIGN GUIDE ARCHITECTURAL INSTALLATION

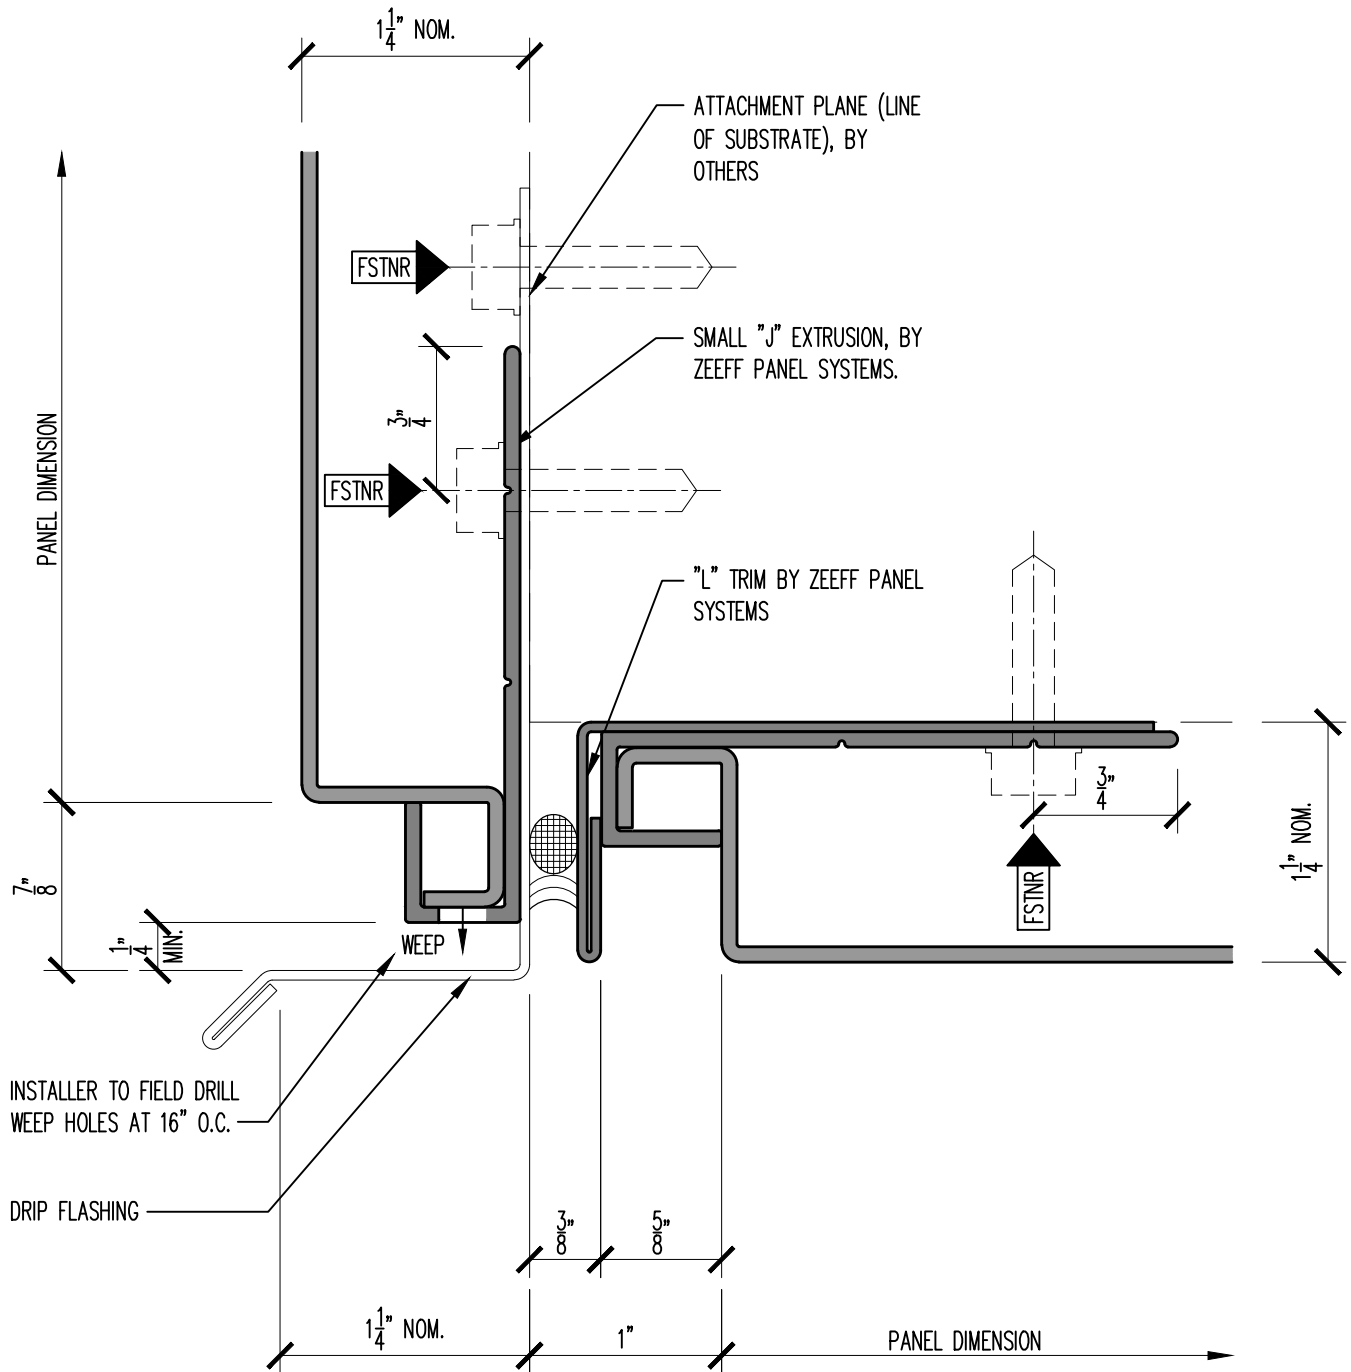

13A

FASCIA TO SOFFIT (TRIM) TRANSITION

SCALE: FULL