


ORIGIN SERIES DESIGN GUIDE ARCHITECTURAL INSTALLATION

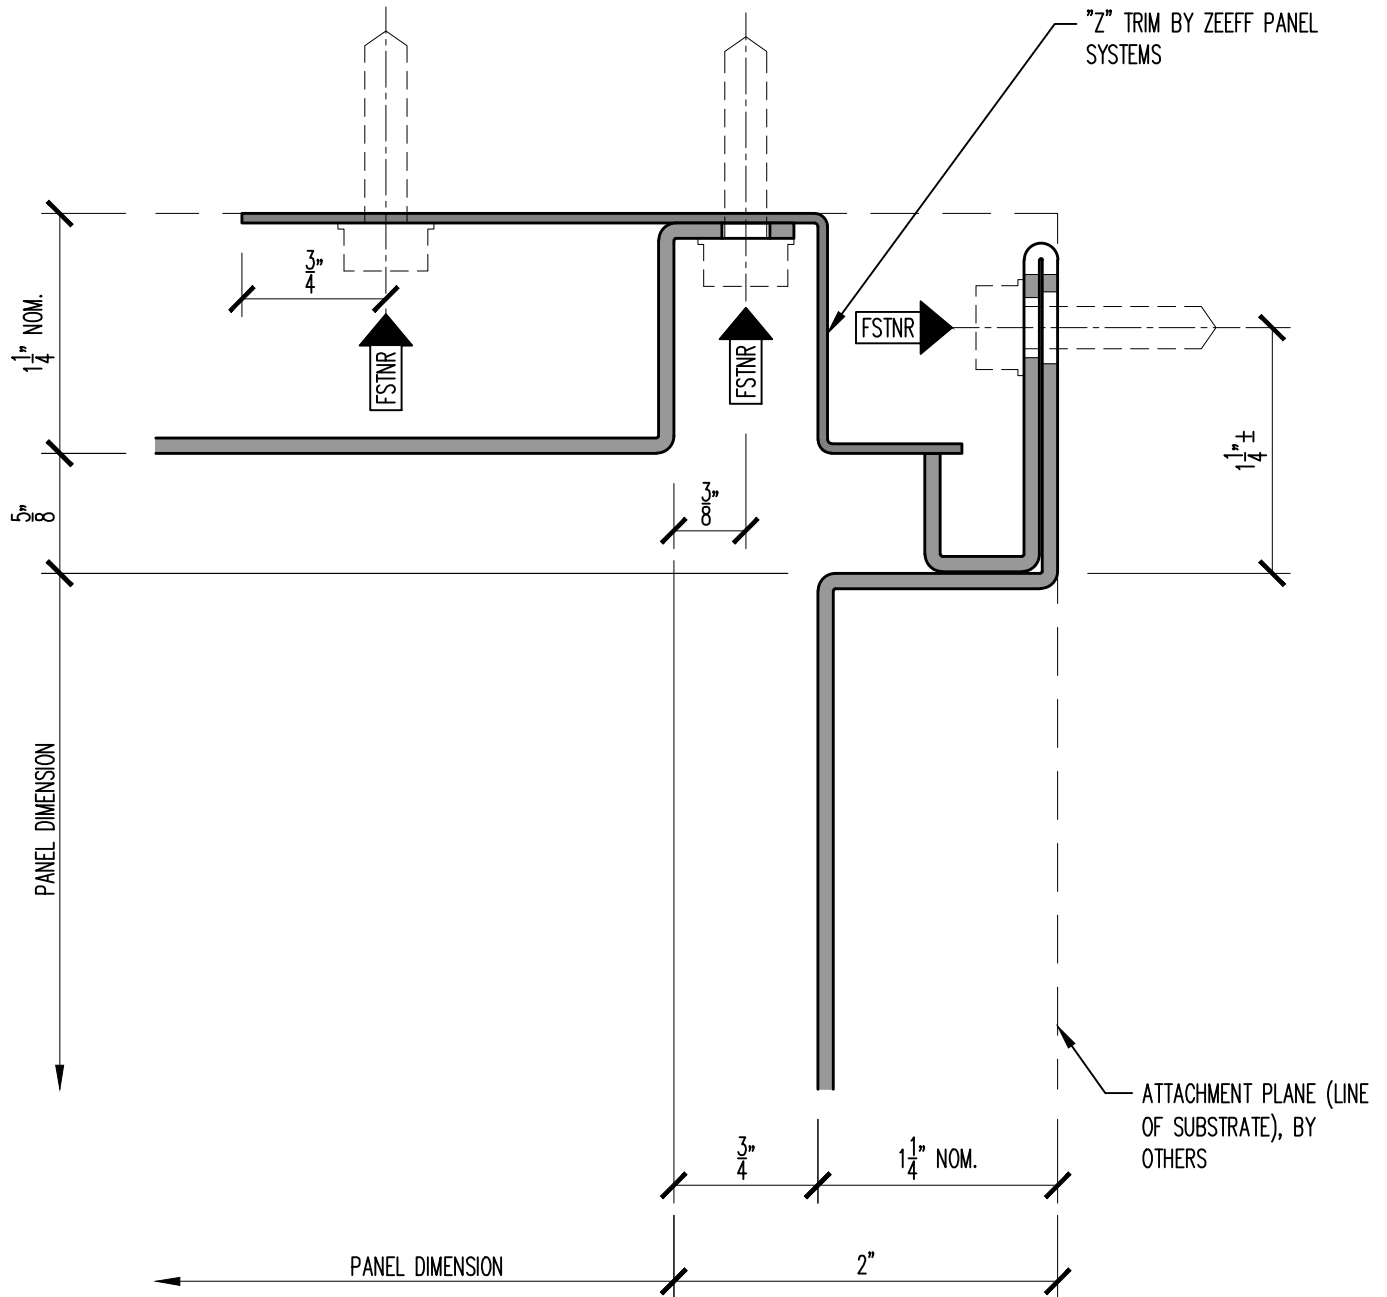

16

WALL TO SOFFIT TRANSITION

SCALE: FULL