
## ORIGIN SERIES DESIGN GUIDE FORMED TRIM INSTALLATION

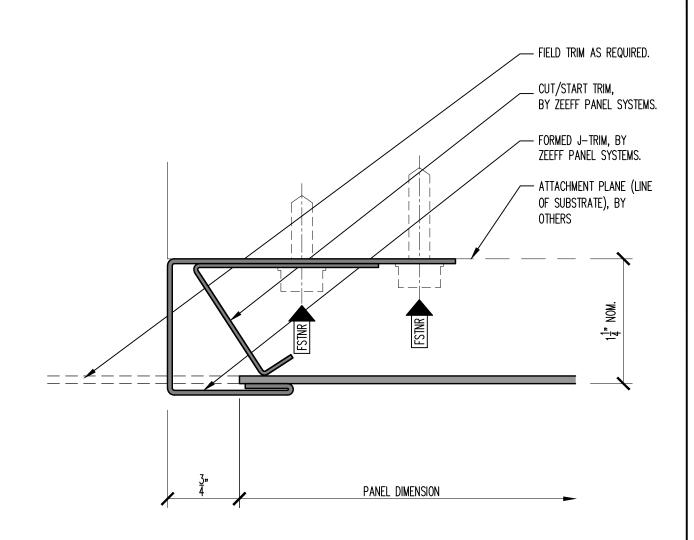





INFO@ZEEFFPANELS.COM | WWW.ZEEFFPANELS.COM

FULLY TESTED: AAMA 508 | ASTM E330 | ASTME E283 | ASTM E1233 | ASTM E331 | AAMA 505.1

D11