

ORIGIN SERIES DESIGN GUIDE

FORMED TRIM INSTALLATION




ATTACHMENT PLANE (LINE OF SUBSTRATE), BY OTHERS

CUT/START TRIM, BY ZEEFF PANEL SYSTEMS.

LOW PROFILE FASTENERS AT JAMB, BY OTHERS

(3) PIECE OUTSIDE CORNER TRIM, BY ZEEFF PANEL SYSTEMS.

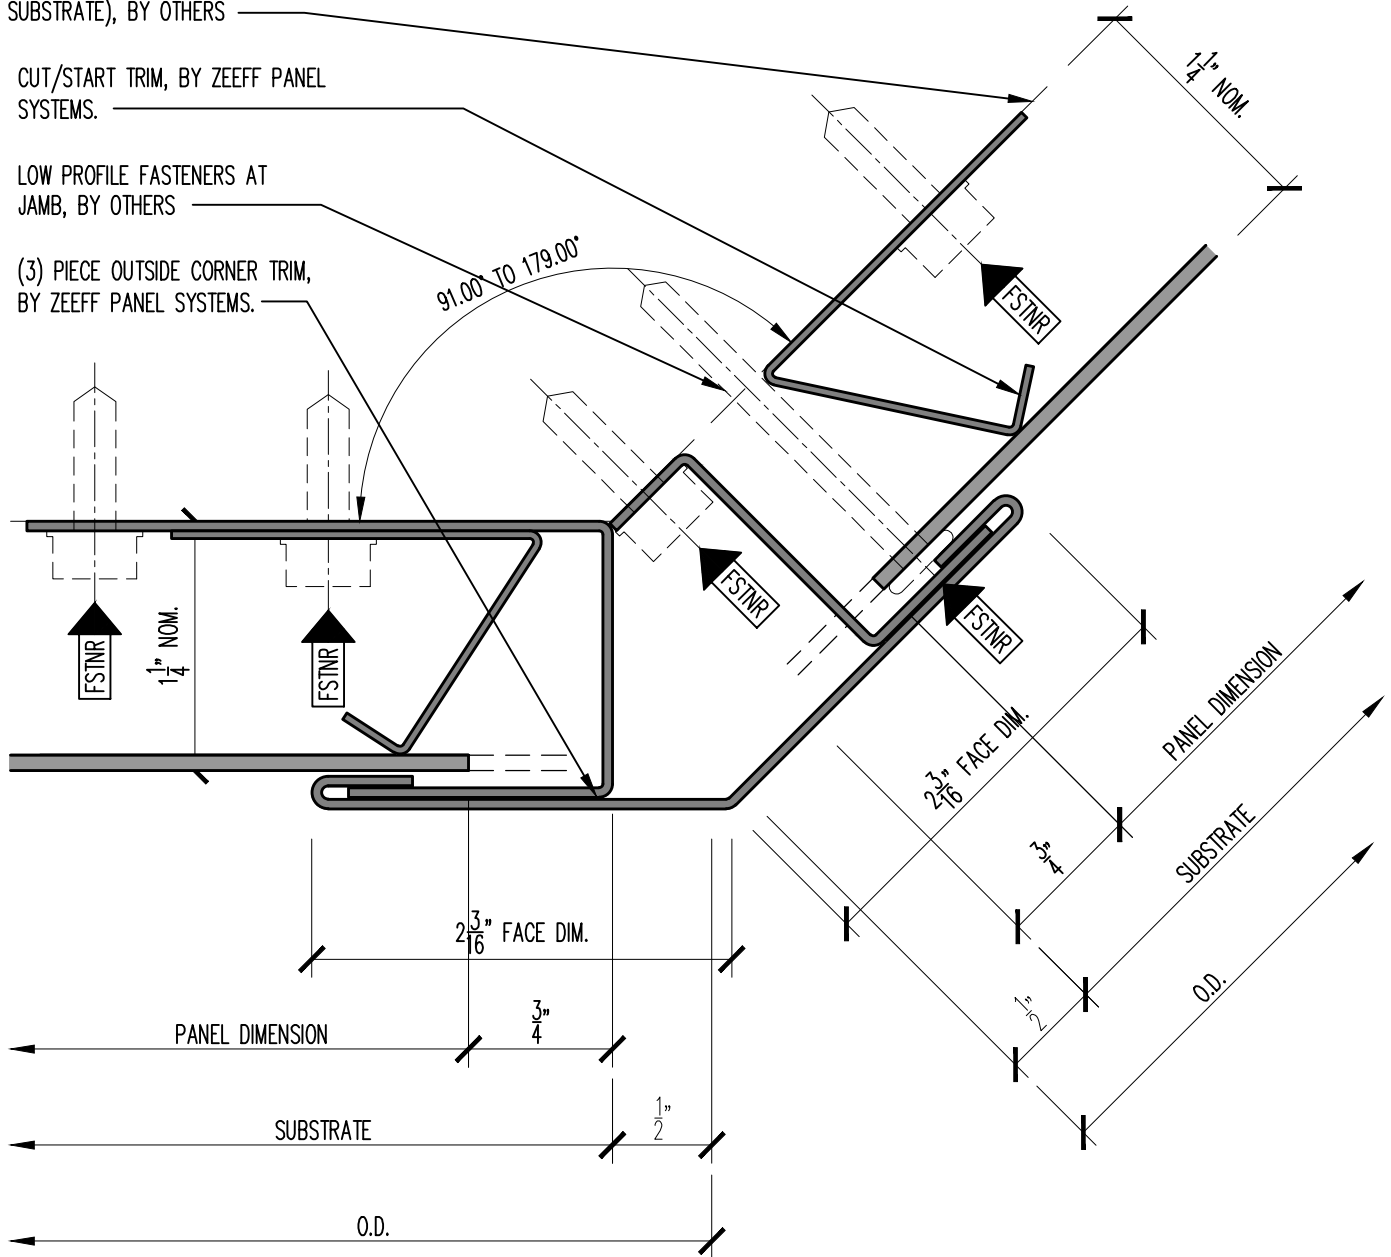

22

NON-90° OUTSIDE CORNER DETAIL

SCALE: FULL